

Directions to change interior filters
(call 720-432-6305 with any questions)

1. To change the interior filters, unplug the air unit and then use a small Phillips head screwdriver to remove the screw and lift up the top tray.



2. There are two interior filters, they're both towards the front of the air unit, one on the left and one on the right. Reach in and unscrew the top of the filter (the filter housing only turns about 10 degrees and can then be lifted out).



3. Slide the old filter off the filter housing and replace with the new filter.



4. Screw filter housing back into its position.
5. Repeat for the filter on the other side.
6. Replace top tray and screw.
7. Plug air unit back in.